









 







 




 



 








Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/M		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down

Original	Substituto	Original	Substituto
	Right		Right
	Left		Left
	OK		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	TV		TV/R
	Video		AV
	L/?		Guide
	PC		Dual
	Text		Pre Ch
	F[+]		Text
	Hold/Freeze		3D
	M/S		Format
			Options





	Original	Substituto	
	Mute	 MUTE	Mute
	PIP	 APP MEDIA	Media
	Auto/Page	 HOME SMART	Smart
	i	 DISPLAY INFO	Info
	Timer/Mix	 AD SUBT	Subt
	F1	 SHIFT + 	Shift + 1
	F2	 SHIFT + 	Shift + 2
	F3	 SHIFT + 	Shift + 3
	F4	 SHIFT + 	Shift + 4

Original	Substituto

