



| Original | Substituto | Original | Substituto |
|--|--|---|---|
|  Power |  Power |  0 |  0 |
|  Mute |  Mute |  -/-- |  Guide |
|  Display |  Shift + Info |  Return |  Back |
|  P.Mode |  Shift + Format |  DTV/DR |  TV/R |
|  Title |  Shift + Smart |  Info |  Info |
|  ST/MO |  Dual |  FAV |  Pre Ch |
|  P.Size |  Format |  EPG |  Shift + Guide |
|  Subtitle |  Subt |  Audio |  Shift + Dual |
|  1 |  1 |  Tv/AV |  AV |
|  2 |  2 |  CH+ |  Ch + |
|  3 |  3 |  CH- |  Ch - |
|  4 |  4 |  Vol+ |  Vol + |
|  5 |  5 |  Vol- |  Vol - |
|  6 |  6 |  Tv Setup |  Smart |
|  7 |  7 |  DVB Menu |  Menu |
|  8 |  8 |  DVD Setup |  Media |
|  9 |  9 |  Eject |  Eject |





| Original | Substituto | Original | Substituto |
|---|---------------|---|--------------|
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Text |  | Text |
|  | Hold |  | Options |
|  | Index |  | List |
|  | Cancel |  | Shift + Exit |
|  | Reveal |  | D. Menu |
|  | Mix |  | Sleep |
|  | Sub Page |  | Shift + Subt |
|  | Size |  | 3D |
|  | Red/Program |  | Red |
|  | Green/Intro |  | Green |
|  | Yellow/Repeat |  | Yellow |
|  | Blue/A-B |  | Blue |

| Original | Substituto | Original | Substituto |
|--|------------|--|---------------|
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | << |  | << |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Slow/Step |  | Shift + Media |
|  | Goto |  | Shift + Text |
|  | Angle |  | Exit |
|  | Zoom |  | Shift + Eject |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

