

 

 
 
 

 

 

 

 




 



 





 


 


 



 
 
 

 






 


 

 
 


 



 













 
 





 


 
 




 





Original	Substituto	Original	Substituto
 Standby	 Power	 Right	 Right
 Rec PVR	 Rec	 Vol+	 Vol +
 List PVR	 Smart	 Favourite	 Pre Ch
 Mute	 Mute	 CH-	 Ch -
 EPG	 Guide	 Down	 Down
 Info	 Info	 Tv/Radio	 TV/R
 TTX	 Text	 1	 1
 Audio	 Dual	 2	 2
 DTV/VCR	 Media	 3	 3
 Subtitle	 Subt	 Recall	 Back
 Menu	 Menu	 4	 4
 CH+	 Ch +	 5	 5
 Up	 Up	 6	 6
 Exit	 Exit	 Goto	 Options
 Left	 Left	 7	 7
 Vol-	 Vol -	 8	 8
 OK	 Ok	 9	 9





 



 











 
 









 





 


 
 


 
 


 




 











 






	Original	Substituto	Original	Substituto
	0			0
	<<			<<
	>>			>>
	I<<			I<<
	>>I			>>I
	Play			Play
	Pause			Pause
	Stop			Stop
	Repeat	 +  Shift + Text		
	Red			Red
	Green			Green
	Yellow			Yellow
	Blue			Blue







 






 



 


 

 

 
 
 




Original	Substituto	Original	Substituto
 Standby	 Power	 Down	 Down
 Rec PVR	 Rec	 Right	 Right
 List PVR	 Smart	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Media	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Favourite	 Pre Ch	 7	 7
 Tv/Radio	 TV/R	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





Original	Substituto	Original	Substituto
 GOTO	 AV		
 <<	 <<<		
 >>	 >>>		
 I<<	 I<<<		
 >>I	 >>>I		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Repeat	 +  Shift + Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

