




 
 

 

 

 



 

 


 


 
 
 

 

 
 
 

 




 
 

 
 



 
 

 
 
 
 

 
 
 



 
 

 

 
 




Original	Substituto	Original	Substituto
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back







 

 
 
 





 
 



 


 
 


 
 

 
 
 
 
 

 

 
 
 
 
 

 





 
 
 

 
 
 



 
 

 

 
 




Original	Substituto	Original	Substituto
GOTO	3D		
<<<	<<<		
>>>	>>>		
I<<<	I<<<		
>>I	>>I		
Play	Play		
Pause	Pause		
Stop	Stop		
RPT	Media		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		





Original	Substituto	Original	Substituto
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





Original	Substituto	Original	Substituto
 GOTO	 3D		
			
			
			
			
			
			
			
			
			
			
			
			

