









Original	Substituto
	Mute / Dimmer
	Fav / Marker / PC
	Power
	Info / Angle
	Smart / List
	1
	2
	3
	Stop / Hold
	4
	5
	6
	Subtitle / EQ
	7
	8
	9
	Display / Media

Original	Substituto
	AV / Input / RDS
	0
	Guide / EPG / -/--
	Shift + Text /
	Text / Goto
	CH+ / Page+
	Up
	Menu / Home
	Left
	Vol-
	OK
	Right
	Vol+
	Back / Return
	CH- / Page-
	Down
	Setup / OPT /





Original	Substituto	Original	Substituto
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow / Timer	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet	 Shift + Red / Netflix /		
 Picture	 Picture / Format		
 Musical note	 Sound / Title		
 PP	 Exit / Cancel / Clear		

Original	Substituto

