



| Original | Substituto | Original | Substituto |
|--|---|---|---|
|  Standby |  Power |  CH+ |  CH+ / Page+ |
|  Mute |  Mute / Dimmer |  Vol- |  Vol- |
|  1 |  1 |  Zoom/Aspect |  Shift + Zoom / |
|  2 |  2 |  Zoom/Aspect |  Picture / Format |
|  3 |  3 |  CH- |  CH- / Page- |
|  4 |  4 |  Menu |  Menu / Home |
|  5 |  5 |  Up |  Up |
|  6 |  6 |  Exit |  Exit / Cancel / Clear |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  OK/Enter |  OK |
|  9 |  9 |  Right |  Right |
|  Recall |  Back / Return |  Sleep |  Sleep / Timer |
|  0 |  0 |  Down |  Down |
|  List |  Smart / List |  Source |  AV / Input / RDS |
|  Vol+ |  Vol+ |  Red |  Red / Netflix / Search |
|  Info/Display |  Display / Media |  Green |  Green / APP / Repeat |
|  Info/Display |  Info / Angle |  Yellow |  Yellow / YouTube / Repeat |



