 











 



 



 

















 

































Original	Substituto	Original	Substituto
 Standby	 Power	 Recall/+10	 Back / Return
 Eject	 Eject / Surround	 FAV/Program	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Display	 Display / Media
 Sleep	 Sleep / Timer	 D.Setup	 Setup / OPT /
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 CH-	 CH- / Page-
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Red/Goto	 Red / Netflix / Search
 0/10	 0	 Green/A-B	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 Recall/+10	 Back / Return	 Recall/+10	 Back / Return
 FAV/Program	 Fav / Marker / PC	 FAV/Program	 Fav / Marker / PC
 Menu	 Menu / Home	 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear
 Display	 Display / Media	 Display	 Display / Media
 D.Setup	 Setup / OPT /	 D.Setup	 Setup / OPT /
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down
 Vol-	 Vol-	 Vol-	 Vol-
 Vol+	 Vol+	 Vol+	 Vol+
 CH-	 CH- / Page-	 CH-	 CH- / Page-
 CH+	 CH+ / Page+	 CH+	 CH+ / Page+
 Red/Goto	 Red / Netflix / Search	 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat	 Green/A-B	 Green / APP / Repeat



