




































 

 

 



Original	Substituto	Original	Substituto
On/Off	 Power	Top Menu	 D.Menu / Top
Audio Off	 Mute / Dimmer	Mode	 Setup / OPT /
Play	 Play / Slow	Auto/Track	 Text / Goto
Pause	 Pause / Step / Freeze	Input Source	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
Record	 Rec / Rec Mode	Menu Up	 Up
Rewind	 << / Tune-	C/CH	 Info / Angle
F.Forward	 >> / Tune+	Menu Left	 Left
Prev.	 I<< / Preset-	OK Enter	 OK
Next	 >>I / Preset+	Menu Right	 Right
Title	 Sound / Title	Menu Down	 Down
Audio	 Audio / Lang I/II	Return	 Back / Return
Subt.	 Subtitle / EQ	Volume+	 Vol+
Digest	 Eject / Surround	DVD/TV	 Smart / List
R/L	 Picture / Format	Slow Up	 CH+ / Page+
Zoom	 Zoom / Size	Volume-	 Vol-
Progr.	 TV/Radio /	Display	 Display / Media



Original		Substituto
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/-
0		0
Vocal/Assist		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat
Rep/A-B		Yellow / YouTube / Repeat
Tone		Blue / Prime Video / Random
ON/Off	 + 	Shift + Power

Original		Substituto
Echo+	 + 	Shift + CH+ /
Echo-	 + 	Shift + CH- /
3D	 + 	Shift + 3
Video	 + 	Shift + 4

