





 



 

 



 






 
 
















 


 



 
 

 

 






 

 









Original	Substituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Return	 Back
 Picture	 Format
 TV / AV	 AV
 Up	 Up

Original	Substituto
 Up	 Ch +
 Down	 Down
 Down	 Ch -
 Right	 Right
 Right	 Vol +
 Left	 Left
 Left	 Vol -
 Menu	 Menu
 Menu	 Ok
 Sound	 Dual
 Display	 Info
 Nicam / A2	 Options
 Cancel	 Exit
 Size	 3D
 Text / Mix	 Text
 Hold	 Pause
 Reveal	 D. Menu





Original		Substituto		Original		Substituto	
	Subpage		Subt				
	Index		List				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				

