




 


 
 
 
 

 
 

 


 






 
 





 


 

 




Original	Substituto	Original	Substituto
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 Eject / Nicam	 Eject	 Left	 Left
 Recall / Goto	 Pre Ch	 Enter	 Ok
 1	 1	 DVD/DVB Menu	 D. Menu
 2	 2	 Exit	 Exit
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Sound	 Shift + Dual
 6	 6	 PIC	 Shift + Format
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sleep	 Sleep
 0	 0	 Aspect	 Format
 TV Menu	 Menu	 Rad / DVD	 Options
 Source	 AV	 Recall / TV	 Back
 Up	 Up	 Text	 Text

Original	Substituto	Original	Substituto
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 Eject / Nicam	 Eject	 Left	 Left
 Recall / Goto	 Pre Ch	 Enter	 Ok
 1	 1	 DVD/DVB Menu	 D. Menu
 2	 2	 Exit	 Exit
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Sound	 Shift + Dual
 6	 6	 PIC	 Shift + Format
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sleep	 Sleep
 0	 0	 Aspect	 Format
 TV Menu	 Menu	 Rad / DVD	 Options
 Source	 AV	 Recall / TV	 Back
 Up	 Up	 Text	 Text





Original	Substituto
Play/Pause / Info	Info
Play/Pause / Info	Play
Play/Pause / Info	Pause
Stop / FAV	Shift + Pre Ch
Stop / FAV	Stop
EPG	Guide
Red / DVD/USB	Red
Green / Title	Green
Yellow / PBC	Yellow
Blue / Angle	Blue
<< / Reveal	<<
>> / Hold	>>
I<< / List	I<<
>>I / Index	>>I
Subpage	Media
Display	Shift + Info
Audio	Dual

Original	Substituto
Subtitle	Subt

