





 


 








 













Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	? / Audio		Audio / Lang I/II
	0		0
	Aspect / Subtitle		Zoom / Size
	Aspect / Subtitle		Subtitle / EQ
	PIP / Recall		Fav / Marker / PC
	AV		AV / Input / RDS
	Mute		Mute / Dimmer
	i		Info / Angle
	Up / P+		Up
	Up / P+		CH+ / Page+
	Z / Return		Back / Return
	Left / Vol -		Left
	Left / Vol -		Vol-
	OK		OK
	Right / Vol +		Right
	Right / Vol +		Vol+
	TXT / Menu		Menu / Home
	TXT / Menu		Text / Goto
	Down / P-		Down
	Down / P-		CH- / Page-
	TV-G / Top		D.Menu / Top
	Red / Rec		Rec / Rec Mode
	Red / Rec		Red / Netflix / Search
	Green / Play		Play / Slow





Original	Substituto	Original	Substituto
 Green / Play	 Green / APP / Repeat		
 Yellow / Pause	 Yellow / YouTube / Repeat		
 Yellow / Pause	 Pause / Step / Freeze		
 Blue / Stop	 Blue / Prime Video / Random		
 Blue / Stop	 Stop / Hold		
 Scan / I<	 I<< / Preset-		
 PAT / >I	 >>I / Preset+		
 S / <<	 << / Tune-		
 P / >>	 >> / Tune+		

