



 







 
 
 
 




Original	Substituto
	Power
	Stop / Hold
	Pause / Step / Freeze
	<< / Tune-
	Play / Slow
	>> / Tune+
	AV / Input / RDS
	TV/Radio /
	Picture / Format
	Menu / Home
	Smart / List
	Info / Angle
	D.Menu / Top
	Setup / OPT /
	Up
	Down
	Right

Original	Substituto
	Left
	OK
	Back / Return
	CH+ / Page+
	CH- / Page-
	Vol+
	Vol-
	Mute / Dimmer
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3
	4
	5





Original	Substituto	Original	Substituto
MNO 6	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
WXYZ 9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
TEXT	Text	GOTO TEXT	Text / Goto

