 


 






 
 






Original	Substituto	Original	Substituto
 Power	 Power	 1	 1
 Mute	 Mute	 2	 2
 Tv/AV	 AV	 3	 3
 Multimedia	 Media	 4	 4
 I/II	 Dual	 5	 5
 List	 List	 6	 6
 ARC	 Options	 7	 7
 Menu	 Menu	 8	 8
 PR+	 Ch +	 9	 9
 PR-	 Ch -	 0	 0
 Up	 Up	 PSM	 Guide
 Down	 Down	 SSM	 Pre Ch
 Right	 Right	 Split Zoom	 Eject
 Left	 Left	 PIP/DW	 3D
 OK	 Ok	 Sleep	 Sleep
 Vol+	 Vol +	 [=?]/Reveal	 TV/R
 Vol-	 Vol -	 Text/*	 Text





Original	Substituto
WIN.SIZE [≡♦]/Win. Size	PICTURE FORMAT Format
MIX [≡/]/Mix	E-MANUAL D.MENU D. Menu
POSITION [≡x]/Position	AD SUBT Subt
TIME [≡o]/Time	CLEAR EXIT Exit
HOLD [≡+]/Hold	RETURN BACK Back
INDEX [≡i]/Index	DISPLAY INFO Info
PIP PR+ Green/PIP PR+	B Green
PIP PR- Red/PIP PR-	A Red
SWAP Yellow/Swap	C Yellow
PIP INPUT Blue/PIP Input	D Blue

Original	Substituto

