


 


 
 



 
 
 

 

 

 

 



 




 
 







 
 











 
 



























 


 
 



 






Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	[≡]		Text
	Google Play		Shift + Media
	Netflix		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Rec List		List
	Input		AV
	*		Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	TV		TV/R

NÃO funciona de controle de voz.





Original	Substituto	Original	Substituto
	Home		Smart
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Recall		Pre Ch
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Audio		Dual
	[...]		Subt
	Help		D. Menu
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause

NÃO funciona de controle de voz.

