



Original	Substituto	Original	Substituto
 Standby	 Power	 Yellow	 Yellow
 Mute	 Mute	 Blue / H.Lock	 Blue
 P.Mode	 Shift + Format	 TV / DTV	 TV/R
 S.Mode	 Shift + Dual	 CH.List	 List
 Size	 Format	 Guide / Scan	 Guide
 I>	 Smart	 Fav. / Still	 Pre Ch
 Subtitle	 Subt	 Up	 Up
 Timer	 Shift + AV	 Right	 Right
 Mix	 3D	 Down	 Down
 [_]	 Shift + Subt	 Left	 Left
 [?] Reveal	 Options	 OK	 Ok
 Message	 Media	 Info / Display	 Info
 Text	 Text	 I/II / Nicam	 Dual
 Source	 AV	 SUB / Sleep	 Sleep
 Hold	 Pause	 ESC / Exit	 Exit
 Red	 Red	 TV Menu	 Menu
 Green	 Green	 DTV Menu	 D. Menu





Original		Substituto		Original		Substituto	
VOL+	Vol +	+ VOL	Vol +				
VOL-	Vol -31552073C6594	VOL -	Vol -				
CH +	CH +	+ CH	Ch +				
CH -	CH -	CH -	Ch -				
1	1	1	1				
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
ZOOM	Zoom	ZOOM ▲	Eject				
RECALL	Recall	RETURN BACK	Back				

