



Original	Substituto
 Power	 Power
 Tuner	 Shift + 1
 CD	 Shift + 2
 CDR / Tape	 Shift + 3
 VCR	 Shift + 4
 TV	 Shift + 5
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cinema Link	 Media

Original	Substituto
 DVD / 6 CH.	 Pre Ch
 Menu / Guide	 Menu
 Menu / Guide	 Guide
 OK	 Ok
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Play	 Play
 Stop	 Stop
 I< Channel/Track	 I<<
 Channel/Track >I	 I>>
 Pause	 Pause
 Disc / FR.D./Index	 Smart





Original	Substituto	Original	Substituto
 Power Tv	 Power	 Down Tv	 Down
 TV	 Blue	 Right Tv	 Right
 Mute Tv	 Mute	 Left Tv	 Left
 1 Tv	 1	 Vol+ Tv/CD	 Vol +
 2 Tv	 2	 Vol- Tv/CD	 Vol -
 3 Tv	 3	 Play Tv	 Play
 4 Tv	 4	 Stop Tv	 Stop
 5 Tv	 5	 News/TA Tv	 Info
 6 Tv	 6	 I< Channel/Track	 I<<
 7 Tv	 7	 Channel/Track >I	 >>I
 8 Tv	 8	 Power CD	 Shift + Power
 9 Tv	 9	 CD	 Yellow
 0 Tv	 0	 Mute CD	 Shift + Mute
 Menu/Guide Tv	 Menu	 1 CD	 Shift + 1
 Menu/Guide Tv	 Guide	 2 CD	 Shift + 2
 OK Tv	 Ok	 3 CD	 Shift + 3
 Up Tv	 Up	 4 CD	 Shift + 4





Original	Substituto	Original	Substituto
	Power VCR		Power
	VCR		Yellow
	Mute VCR		Mute
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	Menu/Guide		Menu
	Up VCR		Up
	OK VCR		Ok
	Down VCR		Down
	Right VCR		Right
	Left VCR		Left
	Vol+ VCR		Vol +
	Vol- VCR		Vol -
	Play VCR		Play
	Stop VCR		Stop
	I< Channel/Track VCR		I<<
	Channel/Track >I VCR		>>I
	Pause VCR		Pause
	T.C/Index VCR		Back
	Power		Shift + Power
	CDR/Tape		Blue
	1 CDR/Tape		Shift + 1
	2 CDR/Tape		Shift + 2
	3 CDR/Tape		Shift + 3
	4 CDR/Tape		Shift + 4
	5 CDR/Tape		Shift + 5



