 





































Original	Substituto
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 C Subtitle / EQ
	 Aspect Picture / Format
	 Menu Menu / Home
	 Up
	 Info Info / Angle
	 Left
	 OK
	 Right

Original	Substituto
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/-





Original	Substituto
 0	 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Play / Pause	 Shift + Play /
 C	 Shift + Subtitle / EQ
 Retour	 Shift + Back / Return

Original	Substituto

