 





 

 



 







 



 



 



 



 



























 







Original		Substituto		Original		Substituto	
	P100		Guide / EPG / -/--		AV		AV / Input / RDS
	Power		Power		0		0
	REV		Sleep / Timer		TV		TV/Radio /
	DOUB		Smart / List		P+		Up
	1		1		P+		CH+ / Page+
	2		2		Mute		Mute / Dimmer
	3		3		TV/TXT		Text / Goto
	Hold		Stop / Hold		Menu		Menu / Home
	4		4		Vol-		Vol-
	5		5		Vol-		Left
	6		6		OK		OK
	SUB		Subtitle / EQ		Vol+		Vol+
	Update		Display / Media		Vol+		Right
	7		7		SWAP		Back / Return
	8		8		P-		CH- / Page-
	9		9		P-		Down
	MIX		D.Menu / Top		16:9		Picture / Format





	Original	Substituto		Original	Substituto
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Violet/Info	 Info / Angle			
	[]	 Zoom / Size			
	PC	 Fav / Marker / PC			
	PT	 Setup / OPT /			

	Original	Substituto		Original	Substituto

