



 








 






 


 











 





 



 


 
 
 

 











 


 




Original	Substituto	Original	Substituto
 Power CD	 Power	 >>I Bluetooth/FM	 Shift + >>I / Preset+
 Power	 9	 >>I USB/Audio In	 Shift + I<< / Preset-
 Power USB/Audio	 Shift + Power	 Album/Preset Down CD	 Down
 Open/Close	 Eject / Surround	 Album/Preset Down	 CH- / Page-
 Bluetooth/FM	 Shift + 9	 Album/Preset Down USB/Audio	 Shift + Down
 CD	 3	 Repeat	 Green / APP / Repeat
 USB/Audio In	 8	 Repeat USB/Audio	 Back / Return
 Album/Preset Up	 Up	 Vol+	 Vol+
 Album/Preset Up Bluetooth/FM	 CH+ / Page+	 Stop CD	 Stop / Hold
 Album/Preset Up USB/Audio In	 Shift + Up	 Stop USB/Audio In	 Shift + Stop /
 I<< CD	 I<< / Preset-	 Vol-	 Vol-
 I<< Bluetooth/FM	 Shift + Left	 Shuffle	 Blue / Prime Video / Random
 I<< USB/Audio In	 Left	 Shuffle USB/Audio In	 AV / Input / RDS
 Play CD	 Play / Slow	 Mute	 Mute / Dimmer
 Pause CD	 Pause / Step / Freeze	 Display	 Display / Media
 Play/Pause USB/Audio In	 Shift + Play /	 Display USB/Audio In	 Shift + Display / Media
 >>I CD	 >>I / Preset+	 Prog	 TV/Radio /





Original	Substituto
Prog USB/Audio In	+ Shift + TV/Radio / Program
Sound	Sound / Title
Clock	+ Shift + Sleep / Timer
Sleep/Timer	Sleep / Timer

Original	Substituto

