






 





 

 




 
 

 








 




 

















 

 



 


 
 






Original		Substituto		Original		Substituto	
	Standby		Power		TV / Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Record		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	Subtitle		Subt		Media		Media





	Original	Substituto		Original	Substituto
	I<< Prev	 I<<			
	Play	 Play			
	<< Rew	 <<			
	USB	 Smart			
	>> Next	 >>			
	Pause	 Pause			
	>> Fwd	 >>			
	Red	 Red			
	Green	 Green			
	Yellow	 Yellow			
	Blue	 Blue			

	Original	Substituto		Original	Substituto

