






 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Audio		Dual
	FAV		Pre Ch
	Fav +	 + 	Shift + Up

Original	Substituto	Original	Substituto
	Fav -	 + 	Shift + Down
	CH +		Ch +
	CH -		Ch -
	P.Mode		Options
	S.Mode	 + 	Shift + Dual
	Vol +		Vol +
	Vol -		Vol -
	Input		AV
	Sleep		Sleep
	Aspect		Format
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu





Original	Substituto
 Exit	 Exit
 Text	 Text
 Index	 Shift + Info
 Play/Pause / Mix/T	 Play
 Play/Pause / Mix/T	 Pause
 Play/Pause / Mix/T	 Shift + Text
 Stop / Reveal	 Stop
 Stop / Reveal	 Smart
 << / Hold	 <<
 << / Hold	 Shift + Pause
 >> / Subpage	 >>
 >> / Subpage	 Shift + Subt
 I<< / Size	 I<<
 I<< / Size	 3D
 >>I / Cancel	 >>I
 >>I / Cancel	 Shift + Exit
 Sub-T	 Subt

Original	Substituto
 TV / Radio	 TV/R
 Rec	 Rec
 TVG	 Guide
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

