







 

 



 

 

 
 
 

 

 

 

 

 

 
 


 

 


 


 

 
 


 

 

 

 


 




 





Original	Substituto
 Power	 Power
 TV Power	 Shift + Power
 Open / Close	 Eject
 Dimmer	 Smart
 Display	 Info
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit

Original	Substituto
 Video Format	 Format
 Audio	 Dual
 Subtitle	 Subt
 Angle	 3D
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 System Menu	 Menu
 Top Menu	 Shift + Menu
 Pop Up / Menu	 D. Menu
 Return	 Back
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok





Original	Substituto	Original	Substituto
 I<<	 I<<		
 <	 +  Shift + Left		
 > / >	 +  Shift + Right		
 >>	 >>		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Play Mode	 Options		
 Pause	 Pause		
 Stop	 Stop		
 Muting	 Mute		
 Vol +	 Vol +		
 Vol -	 Vol -		
 Prog +	 Ch +		
 Prog -	 Ch -		

