



| Original     | Substituto                |
|--------------|---------------------------|
| Tuner        | Shift + 6                 |
| Power        | Power                     |
| Open / Close | Eject / Surround          |
| Aux          | Shift + 7                 |
| DVD          | Shift + 2                 |
| USB          | Shift + 8                 |
| Dimmer       | Shift + Mute / Dimmer     |
| Prog / Memo  | TV/Radio /                |
| Audio        | Audio / Lang I/II         |
| Sound        | Sound / Title             |
| S-Title      | Subtitle / EQ             |
| Clear        | Exit / Cancel / Clear     |
| Repeat       | Green / APP / Repeat      |
| Repeat A-B   | Yellow / YouTube / Repeat |
| Marker       | Fav / Marker / PC         |
| Search       | Red / Netflix / Search    |
| << / Scan -  | << / Tune-                |

| Original        | Substituto            |
|-----------------|-----------------------|
| I<< / Skip -    | I<< / Preset-         |
| >>I / Skip +    | >>I / Preset+         |
| >> / Scan +     | >> / Tune+            |
| Title           | Shift + Sound / Title |
| Stop            | Stop / Hold           |
| Play            | Play / Slow           |
| Pause / Step    | Pause / Step / Freeze |
| Zoom            | Zoom / Size           |
| Setup           | Setup / OPT /         |
| Display         | Display / Media       |
| Menu            | Menu / Home           |
| Up / Preset +   | Up                    |
| Return          | Back / Return         |
| Left / Tun. -   | Left                  |
| Enter           | OK                    |
| Right / Tun. +  | Right                 |
| Down / Preset - | Down                  |



