
 
 


 

 

 




 



 





 
 

 

 


 




Original	Substituto	Original	Substituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Subt.List	 Subt	Back	 Back
Sleep Timer	 Sleep	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 +  Shift + Info	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Substituto	Original	Substituto
8	 8	Tone+	 >>
9	 9	Nicam/Mono	 +  Shift + Green
Guide -/-- 1.	 GUIDE	Level L	 +  Shift + Yellow
0/10	 0	Level R/Woofer	 +  Shift + Blue
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Game Coo	 3D		
Green	 B		
Yellow	 C		
Blue	 D		
Contrast+	 +  Shift + Ch +		
Contrast-	 +  Shift + Ch -		
Mix Scan	 +  Shift + Text		
Surround	 +  Shift + Red		
Audio-	 I<<		
Audio+	 +  Shift + >>I		
Tone-	 <<		

