



| Original | Substituto | Original | Substituto |
|----------|------------|----------|-----------------------------|
| | Power | | Power |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | AV | | AV / Input / RDS |
| | Up | | Up |
| | P+ | | CH+ / Page+ |
| | Right | | Right |
| | Vol+ | | Vol+ |
| | Left | | Left |
| | Vol- | | Vol- |
| | OK | | OK |
| | Down | | Down |
| | P- | | CH- / Page- |
| | i | | Info / Angle |
| | CL | | D.Menu / Top |
| | Mute | | Mute / Dimmer |
| | TXT | | Text / Goto |
| | Red | | Red / Netflix / Search |
| | Rec | | Rec / Rec Mode |
| | Green | | Green / APP / Repeat |
| | Timer | | Sleep / Timer |
| | Yellow | | Yellow / YouTube / Repeat |
| | Picture | | Picture / Format |
| | Blue | | Blue / Prime Video / Random |
| | Sound | | Sound / Title |
| | (I)- | | Shift + CH- / Page- |





| Original | Substituto | Original | Substituto |
|----------|------------|----------|-----------------------|
| | (I)+ | | + Shift + CH+ / |
| | ⚙️- | | << / Preset- |
| | ⚙️+ | | >> / Preset+ |
| | << | | << / Tune- |
| | Play | | Play / Slow |
| | >> | | >> / Tune+ |
| | Pause | | Pause / Step / Freeze |
| | Index + << | | + Shift + << / |
| | Index + > | | + Shift + >> / |
| | Stop | | Stop / Hold |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

