



 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





	Original	Substituto	Original	Substituto
	Green / >>	>> / Tune+		
	Green / >>	Green / APP / Repeat		
	Yellow / <<	<< / Preset-		
	Yellow / <<	Yellow / YouTube / Repeat		
	Blue / >>	Blue / Prime Video / Random		
	Blue / >>	>> / Preset+		
	Text / Play/Pause	Text / Goto		
	Text / Play/Pause	Pause / Step / Freeze		
	Text / Play/Pause	Play / Slow		
	Stop / Still	Stop / Hold		
	Timer / Subtitle	Subtitle / EQ		
	Size / Aspect	Zoom / Size		
	Cancel [≡X]	Shift + Exit / Cancel / Clear		
	Radio	TV/Radio /		
	Audio / I/II	Audio / Lang I/II		
	Rec	Rec / Rec Mode		





Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Substituto	Original	Substituto
	Green Green / APP / Repeat		
	>> >> / Tune+		
	Yellow Yellow / YouTube / Repeat		
	l<< l<< / Preset-		
	Blue Blue / Prime Video / Random		
	>>l >>l / Preset+		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	[≡] Text / Goto		
	Stop/Still Stop / Hold		
	[≡+] Picture / Format		
	[≡o]/Subtitle Subtitle / EQ		
	[≡◆]/[+] Zoom / Size		
	[≡x] Setup / OPT /		
	Radio TV/Radio /		
	Audio Audio / Lang l/ll		
	Rec Rec / Rec Mode		

