



 
 






 




Original	Substituto	Original	Substituto
	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	10+		Shift + Guide / EPG / -/-
	9		9
	0		0
	Display		Display / Media
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Prog/EPG		Guide / EPG / -/-

Original	Substituto	Original	Substituto
	Prog/EPG		Shift + TV/Radio / Program
	Title/TTX		Text / Goto
	Title/TTX		Sound / Title
	Vol+		Vol+
	Goto		Shift + Text /
	PBC		Picture / Format
	Vol-		Vol-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Return		Back / Return
	Source		AV / Input / RDS
	Tv/Radio		TV/Radio /
	Up		Up
	Down		Down
	Enter		OK





Original	Substituto
REV <<	TUNE- << / Tune-
▶ Right/FAV+	▶ Right
FWD >>	TUNE+ >> / Tune+
PREV I<<	PRESET- I<< / Preset-
◀ Left/FAV-	◀ Left
NEXT >>I	PRESET+ >>I / Preset+
3D	SHIFT + 3 Shift + 3
SUBTITLE	EQ SUBTITLE Subtitle / EQ
ZOOM	SIZE ZOOM Zoom / Size
MODE	LIST SMART Smart / List
DIGEST	PC FAV MARKER Fav / Marker / PC
LANGUAGE	LANG I/II AUDIO Audio / Lang I/II
P/N	TIMER SLEEP Sleep / Timer
REPEAT	APP REPEAT Green / APP / Repeat
L/R	TOP MENU D.MENU D.Menu / Top
A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat
ANGLE	ANGLE INFO Info / Angle

Original	Substituto
SLOW	SHIFT + SLOW Shift + Play /

