



Original	Substituto	Original	Substituto
PP	PP	RETURN BACK	Back / Return
Power	Power	Power	Power
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
P<P	P<P	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - SAT 0	0
--	--	GUIDE EPG	Gui de / EPG / - / -
M	Menu [M]	HOME MENU	Menu / Home
i	Info [i]	ANGLE INFO	Info / Angle
I-II	I-II	LANG I/II	Audi o / Lang I/II

Original	Substituto	Original	Substituto
Mute	Mute / Dimmer	DIMMER MUTE	Mute / Dimmer
Left	Left	Left	Left
Up	Up	Up	Up
Right	Right	Right	Right
OK	OK	OK	OK
Down	Down	Down	Down
V -	Vol -	VOL -	Vol -
V +	Vol +	VOL +	Vol +
P -	CH / Page-	CH PAGE -	CH / Page-
P +	CH+ / Page+	CH PAGE +	CH+ / Page+
Red / Sound	Red / Netflix / Search	NETFLIX SEARCH	Red / Netflix / Search
Red / Sound	Sound / Title	TITLE SOUND	Sound / Title
Green / Picture	Green / APP / Repeat	APP REPEAT	Green / APP / Repeat
Green / Picture	Picture / Format	FORMAT PICTURE	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random	Prime Video RANDOM	Blue / Prime Video / Random
Text	Text / Goto	GOTO TEXT	Text / Got o



