
 



























 



 

















 







Original	Substituto	Original	Substituto
PP	PP	 RETURN Back / Return	
	Power		Power
1	1	 TV 1	1
2	2	 DVD 2	2
3	3	 CD - STB 3	3
4	4	 VIDEO 4	4
5	5	 TAPE 5	5
6	6	 TUNER 6	6
7	7	 AUX - HDD 7	7
8	8	 USB 8	8
9	9	 BLUETOOTH 9	9
P<P	P<P	 PC FAV MARKER Fav / Marker / PC	
0	0	 HDMI - SAT 0	0
--	--	 GUIDE EPG Guide / EPG / --	
	Menu [M]	 HOME MENU Menu / Home	
	Info [i]	 ANGLE INFO Info / Angle	
	I-II	 LANG I/II AUDIO Audio / Lang I/II	

Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -		Vol-
	V +		Vol+
	P -		CH- / Page-
	P +		CH+ / Page+
	Red / Sound		Red / Netflix / Search
	Red / Sound		Sound / Title
	Green / Picture		Green / APP / Repeat
	Green / Picture		Picture / Format
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	Text		Text / Goto



