

 

 

 

 

 





 



 

 

 







 
















 






 

 

 

 









| Original  | Substituto | Original  | Substituto               |
|---|------------|---|--------------------------|
|      | Power      |      | Power                    |
|      | Mute       |      | Mute / Dimmer            |
|      | 1          |      | 1                        |
|      | 2          |      | 2                        |
|      | 3          |      | 3                        |
|      | 4          |      | 4                        |
|      | 5          |      | 5                        |
|      | 6          |      | 6                        |
|      | 7          |      | 7                        |
|     | 8          |     | 8                        |
|    | 9          |    | 9                        |
|    | List       |    | Smart / List             |
|    | 0          |    | 0                        |
|    | Recall     |    | Back / Return            |
|    | P.Mode     |    | Picture / Format         |
|    | S.Mode     |    | Sound / Title            |
|    | Sleep      |    | Sleep / Timer            |
|    | Vol +      |    | Vol+                     |
|    | MTS        |    | Info / Angle             |
|    | CH +       |    | CH+ / Page+              |
|    | Vol -      |    | Vol-                     |
|    | Aspect     |    | Shift + Picture / Format |
|    | CH -       |    | CH- / Page-              |
|    | Guide      |    | Guide / EPG / -/-        |
|    | Home       |    | Shift + Menu /           |
|    | Rec        |    | Rec / Rec Mode           |
|   | Menu       |   | Menu / Home              |
|  | Up         |  | Up                       |
|  | Source     |  | AV / Input / RDS         |
|  | Left       |  | Left                     |
|  | Enter      |  | OK                       |
|  | Right      |  | Right                    |
|  | Exit       |  | Exit / Cancel / Clear    |
|  | Down       |  | Down                     |



