



Original	Substituto	Original	Substituto
	Swap		Smart / List
	Text		Text / Goto
	Media		Display / Media
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back / Return
	FAV		Fav / Marker / PC

Original	Substituto	Original	Substituto
	Subtitle		Subtitle / EQ
	i		Info / Angle
	V-Format		Picture / Format
	Vol+		Vol+
	Page+		Shift + CH+ /
	P+		CH+ / Page+
	Vol-		Vol-
	Page-		Shift + CH- /
	P-		CH- / Page-
	Audio		Audio / Lang I/II
	AD		Shift + Audio / Lang I/II
	Sound / TV/Radio		Sound / Title
	Guide		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right





Original	Substituto
	Menu / Home
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	<< / Preset-
	>>  / Preset+
	Sleep / Timer
	Zoom / Size

Original	Substituto

