


 














 
 
 
 
 






 
 
 
 
 
 

 
 







Original		Substituto		Original		Substituto	
	Power		Power		Menu		Menu
	Mute		Mute		Exit		Exit
	Nicam / A2	+	Shift + Smart		1		1
	Sleep		Sleep		2		2
	Aspect		Format		3		3
	USB / CR		Media		4		4
	Display	+	Shift + Info		5		5
	Auto		Smart		6		6
	P.Mode	+	Shift + Format		7		7
	S.Mode		Dual		8		8
	DTV		3D		9		9
	Source		AV		0		0
	Up		Up		-/--	+	Shift + Guide
	Right		Right		Recall		Back
	Down		Down		CH +		Ch +
	Left		Left		CH -		Ch -
	Enter		Ok		Info		Info





Original		Substituto		Original		Substituto	
	FAV		Pre Ch		Red		Red
	Audio		Shift + Dual		Green		Green
	TV / Radio		TV/R		Yellow		Yellow
	Vol +		Vol +		Cyan		Blue
	Vol -		Vol -				
	Play/Pause / Text		Play				
	Play/Pause / Text		Pause				
	Play/Pause / Text		Text				
	Stop / EPG		Guide				
	Stop / EPG		Stop				
	Subtitle		Subt				
	Rec / Hold		Rec				
	Rec / Hold		Shift + Stop				
	<< / Index		<<				
	>> / Size		>>				
	I<< / Reveal		I<<				
	>>I / SBPage		>>I				

