










 


 
 










 

Original	Substituto
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Substituto
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 <-- PR	 Back / Return
 Page -	 Shift + CH- /
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 Down / PR -	 CH- / Page-
 Down / PR -	 Down





Original	Substituto	Original	Substituto
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	Red / Find		Red / Netflix / Search
	Green / V-Format		Picture / Format
	Green / V-Format		Green / APP / Repeat
	Yellow / TXT		Text / Goto
	Yellow / TXT		Yellow / YouTube / Repeat
	Blue / Audio		Audio / Lang I/II
	Blue / Audio		Blue / Prime Video / Random
	Record		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold
	Shift		Setup / OPT /
	<< Fast		<< / Tune-
	>> Fast		>> / Tune+

Original	Substituto	Original	Substituto
	< Slow		I<< / Preset-
	> Slow		>>I / Preset+

