



Original	Substituto
Power	Power
Direct Tv Rec	Shift + Rec / Rec Mode
Tv Aspect/AV Link	Picture / Format
Tv/Text	Text / Goto
1	1
2	2
3	3
Tracking/V-Lock+	CH+ / Page+
4	4
5	5
6	6
Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Vol+	Vol+
AV/Input Select	AV / Input / RDS

Original	Substituto
0	0
-/--	Guide / EPG / -/--
Vol-	Vol-
Library/Search	Red / Netflix / Search
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
ShowView	Info / Angle
Still Album	Smart / List
Replay	Back / Return
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode
Menu	Menu / Home
Up	Up
Play	Play / Slow
Exit	Exit / Cancel / Clear
Left	Left
<< / Tune-	<< / Tune-





Original	Substituto
	OK
	Right
	>> / Tune+
	Down
	Stop / Hold
	Shift + Up
	Shift + Right
	Shift + Vol+
	Shift + CH+ /
	Shift + Down
	Shift + Left
	Shift + Vol-
	Shift + CH- /
	TV/Radio /
	Shift + Exit / Cancel / Clear
	Setup / OPT /
	Sleep / Timer

Original	Substituto
	Shift + Sleep / Timer
	Audio / Lang I/II
	Display / Media
	Green / APP / Repeat





Original	Substituto	Original	Substituto
	Power		Power
	Tv Aspect/AV Link		Picture / Format
	Tv/Text		Text / Goto
	1		1
	2		2
	3		3
	Tracking/V.Lock+		CH+ / Page+
	4		4
	5		5
	6		6
	Tracking/V.Lock-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	AV/Input Select		AV / Input / RDS
	0		0

Original	Substituto	Original	Substituto
	-/--		Guide / EPG / -/--
	Vol-		Vol-
	Prog./Check Up		Up
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Date+		Right
	Yellow		Yellow / YouTube / Repeat
	On+		Shift + Vol+
	Blue		Blue / Prime Video / Random
	Off+		Shift + CH+ /
	Prog./Check Down		Down
	Date-		Left
	On-		Shift + Vol-
	Off-		Shift + CH- /

