

 
 




Original	Substituto
Power TV	Power
Power STB	+  Shift + Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	Text
PRE-CH	Pre Ch
Vol+	Vol +
Vol-	Vol -

Original	Substituto
Mute	Mute
CH.List	List
P+	Ch +
P-	Ch -
Menu	Menu
Smart Hub	Smart
Guide	Guide
Tools	Options
Info	Info
Back/Return	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red	Red





Original	Substituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
	 Dual
 Status	 TV/R
	 3D
 E-Manual	 D. Menu
	 Format
 AD/Subt	 Subt
	
	
 Pause	 Pause
	
	
 Rec	 Rec
 Play	 Play
 Stop	 Stop

Original	Substituto

