


































































 




Original	Substituto	Original	Substituto
 Power	 Power	 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer	 Input	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu / Home
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol +	 Vol+
 Info	 Info / Angle	 ADD / DEL	 Shift + Back / Return
 0	 0	 PR +	 CH+ / Page+
 Recall	 Back / Return	 Vol -	 Vol-
 PMode	 Picture / Format	 Cancel	 Shift + Exit / Cancel / Clear
 I / II	 Audio / Lang I/II	 PR -	 CH- / Page-
 EPG	 Guide / EPG / -/--	 Red	 Red / Netflix / Search

Original	Substituto	Original	Substituto
 Power	 Power	 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer	 Input	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu / Home
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol +	 Vol+
 Info	 Info / Angle	 ADD / DEL	 Shift + Back / Return
 0	 0	 PR +	 CH+ / Page+
 Recall	 Back / Return	 Vol -	 Vol-
 PMode	 Picture / Format	 Cancel	 Shift + Exit / Cancel / Clear
 I / II	 Audio / Lang I/II	 PR -	 CH- / Page-
 EPG	 Guide / EPG / -/--	 Red	 Red / Netflix / Search





Original	Substituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Shift + Play /
	Stop / Hold
	Setup / OPT /
	Eject / Surround
	Shift + I<< / Preset-
	I<< / Preset-
	<< / Tune-
	Zoom / Size
	Sound / Title
	>>I / Preset+
	Shift + >>I / Preset+
	>> / Tune+
	Shift + Rec / Rec Mode

Original	Substituto
	Rec / Rec Mode
	Smart / List

