








 

 





 
 













 
















 

 




 

 








 





 

 

 







 



 

 

 

 



 



 

Original	Substituto	Original	Substituto
 Power	 Power	 CH-	 CH- / Page-
 TV / AV	 AV / Input / RDS	 Exit	 Exit / Cancel / Clear
 TV/TXT	 Text / Goto	 Vol-	 Vol-
 Cancel	 Shift + Exit / Cancel / Clear	 Up	 Up
 Reveal	 Display / Media	 Left	 Left
 DTV	 D.Menu / Top	 OK	 OK
 Hold	 Stop / Hold	 Right	 Right
 Size	 Shift + Zoom /	 Down	 Down
 Subpage	 Eject / Surround	 1	 1
 Index	 Smart / List	 2	 2
 Red	 Red / Netflix / Search	 3	 3
 Green	 Green / APP / Repeat	 4	 4
 Yellow	 Yellow / YouTube / Repeat	 5	 5
 Blue	 Blue / Prime Video / Random	 6	 6
 CH+	 CH+ / Page+	 7	 7
 Menu	 Menu / Home	 8	 8
 Vol+	 Vol+	 9	 9

Original	Substituto	Original	Substituto
 CH-	 CH- / Page-	 CH- / Page-	 CH- / Page-
 Exit	 Exit / Cancel / Clear	 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Vol-	 Vol-	 Vol-	 Vol-
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down
 1	 1	 1	 1
 2	 2	 2	 2
 3	 3	 3	 3
 4	 4	 4	 4
 5	 5	 5	 5
 6	 6	 6	 6
 7	 7	 7	 7
 8	 8	 8	 8
 9	 9	 9	 9





Original		Substituto	
	.		TV/Radio /
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	I/II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	Info		Info / Angle
	Zoom		Zoom / Size
	Freeze		Pause / Step / Freeze
	EPG		Guide / EPG / -/--
	FAV List		Fav / Marker / PC
	FAV ADD		I<< / Preset-
	FAV >>I		>>I / Preset+
	Subtitle		Subtitle / EQ
	Time	 + 	Shift + Sleep / Timer

Original		Substituto	
	Quick Start		Setup / OPT /

