






 

 

 



 







 
 


 

 








Original	Substituto	Original	Substituto
	Power		Power
	Mode DVB		TV/R
	Direct TV Rec		Rec
	Guide		Guide
	TV / AV		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text

Original	Substituto	Original	Substituto
	STTL / FP		Subt
	Index		Shift + Info
	Hold		Shift + Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / VCR		0
	C		Back
	i		Info
	CH +		Ch +
	CH -		Ch -





Original	Substituto	Original	Substituto
	Vol +		Vol +
	Vol -		Vol -
	Aspect		Format
	N		Smart
	Mute		Mute
	DVD Power		Shift + Power
	DVD Rec		Shift + Rec
	DVD Progame -		Shift + Ch -
	DVD Progame		Shift + Ch +
	DVD << / I<<		<<
	DVD << / I<<		I<<
	DVD >> / >>I		>>
	DVD >> / >>I		>>I
	DVD Stop		Stop
	DVD Pause / Step		Pause
	DVD Play		Play

Original	Substituto





	Original	Substituto
	VCR Power	Power
	VCR Rec	Rec
	VCR	Ch -
	VCR	Ch +
	VCR << / I<<	<<
	VCR << / I<<	I<<
	VCR >> / >>I	>>
	VCR >> / >>I	>>I
	VCR Stop	Stop
	VCR Pause / Step	Pause
	VCR Play	Play

	Original	Substituto

