








 



 



 



 
















 
 


 
 


 


 
 
 

 
 
 


 



 
 








Original	Substituto	Original	Substituto
 STB Power	 Power	 Right / Vol +	 Right
 Mute	 Mute	 Left / Vol -	 Left
 Audio	 Dual	 OK	 Ok
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Ch -
 3	 3	 Right / Vol +	 Vol +
 4	 4	 Left / Vol -	 Vol -
 5	 5	 Menu	 Menu
 6	 6	 EPG	 Guide
 7	 7	 FAV	 Pre Ch
 8	 8	 Exit	 Exit
 9	 9	 Subt	 Subt
 0	 0	 Info	 Info
 List	 List	 TTX	 Text
 Recall	 Back	 TV / Radio	 TV/R
 Up / CH +	 Up	 Page -	 Shift + Down
 Down / CH -	 Down	 Page +	 Shift + Up





Original	Substituto	Original	Substituto
	Format		Shift + Ch -
	Media		Shift + Ch +
	Red		Shift + Ok
	Green		AV
	Yellow		
	Blue		
	Play		
	Pause		
	Stop		
	Rec		
	<<		
	>>		
	I<<		
	>>I		
	Shift + Power		
	Shift + Vol -		
	Shift + Vol +		

Original	Substituto	Original	Substituto
	Shift + Ch -		Shift + Ch -
	Shift + Ch +		Shift + Ch +
	Shift + Ok		Shift + Ok
	AV		AV

