 


 


 
 


 
 
 
 





 



 
 







 
 
 
 

 










Original	Substituto	Original	Substituto
 Power	 Power	 Hold / Guide	 Guide
 Mute	 Mute	 Hold / Guide	 Shift + Stop
 1	 1	 Red	 Red
 2	 2	 Green	 Green
 3	 3	 Yellow	 Yellow
 4	 4	 Blue	 Blue
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 I - II	 Dual
 8	 8	 Source	 AV
 9	 9	 Freeze	 Shift + Pause
 0	 0	 CH +	 Ch +
 Text	 Text	 CH -	 Ch -
 Recall / S.Page	 Back	 Sleep	 Sleep
 Index / PVR List	 Smart	 Menu	 Menu
 Reveal / Rec	 Rec	 DTV / Radio	 TV/R
 Zoom / T.Shift	 Eject	 Exit	 Exit





Original	Substituto	Original	Substituto
	Aspect		Format
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Media		Media
	Info		Info
	Subtitle		Subt
	Play / Pause		Play
	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
			>>>
			Slow / FAV
			Pre Ch
			Repeat / Fav +
			Shift + Up
			Repeat / Fav +
			Shift + Text
			A-B / Fav -
			Shift + Down
			A-B / Fav -
			Shift + Back

