

 
 
 
 
 
 





 

 








 




 
 
 
 

 





Original	Substituto	Original	Substituto
	POWER		Power
	TV		TV/R
	VCR / AUX		Shift + TV/R
	SLEEP		Sleep
	TV / AV		AV
	TUNER / BAND		Smart
	DVD / CD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≧10 / -/-		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	VOL +		Vol +
	VOL -		Vol -
	SKIP PREV.		I<<
	SKIP NEXT		>>I
	SLOW/SEARCH		<<
	SLOW/SEARCH		>>
	STOP		Stop
	PAUSE		Pause
	PLAY		Play
	TOP MENU / DIR. NAV.		D. Menu
	MENU / PLAY LIST		Menu
	UP		Up
	LEFT		Left





Original	Substituto
ENTER	Ok
RIGHT	Right
DOWN	Down
DISPLAY / TV VOL-	Info
DISPLAY / TV VOL-	Shift + Vol -
RETURN / TV	Shift + Vol +
RETURN / TV	Back
SUBWOOFER	3D
SFC	Green
C. FOCUS	Shift + 1
SUPER SRND.	Format
DOLBY PL. II	Dual
Mix 2CH	Shift + Subt
C. S. M.	Red
POSITION	Pre Ch
AUDIO	Shift + Dual
ZOOM	Eject

Original	Substituto
SETUP	Options
MUTING	Mute
FL DISPLAY	Shift + Info
PAGE	Shift + 2
GROUP	Shift + 3
REPEAT	Text
PLAY MODE	Shift + Play
TEST	Yellow
CH. SELECT	List
QUICK REPLAY	Blue
SUBTITLE	Subt









 


 







 

 

 
 





 
 
 





 





Original	Substituto		
	Power		Power
	Power AV	+	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide
	Tv/AV		AV
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +

Original	Substituto		
	Tv Vol-		Vol -





Original	Substituto
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/--	 GUIDE Guide
 SKIP >>	 >> >>
 SKIP <<	 << <<
 SLOW SE <<	 << <<
 SEARCH >>	 >> >>

Original	Substituto
 Pause	 Pause
 Play	 Play
 Stop	 Stop

