 



 







 





 





 









 



 









 





 

 







 








Original	Substituto	Original	Substituto
 Standby	 Power	 Down / CH -	 Down
 Mute	 Mute / Dimmer	 Timeshift	 Sleep / Timer
 PG +	 >>I / Preset+	 1	 1
 PG -	 Smart / List	 2	 2
 DTV / VCR	 Vol+	 3	 3
 Vol +	 I<< / Preset-	 EPG	 Guide / EPG / -/--
 PG -	 Info / Angle	 4	 4
 Info	 Vol-	 5	 5
 Vol -	 Menu / Home	 6	 6
 Menu	 CH+ / Page+	 Recall	 Back / Return
 Up / CH +	 Up	 7	 7
 Up / CH +	 Exit / Cancel / Clear	 8	 8
 Exit	 Left	 9	 9
 Left	 OK	 0	 0
 OK	 Right	 Audio	 Audio / Lang I/II
 Right	 Rec / Rec Mode	 TV / Radio	 TV/Radio /
 Record	 CH- / Page-	 FAV	 Fav / Marker / PC
 Down / CH -			



