










 





 












 
 










 
 


 




| Original | Substituto |
|--|---|
|  Power |  Power |
|  I<< |  I<< / Preset- |
|  Eject |  Eject / Surround |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  >> |  >> / Preset+ |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |
|  TV/TXT / |  Setup / OPT / |
|  TV/TXT / |  Shift + Goto Text / Text / |
|  Cancel / Zoom |  Shift + Exit / Cancel / Clear |
|  Reveal / Subtitle |  Shift + Subtitle / EQ |
|  Stop |  Stop / Hold |
|  Hold / Menu |  Shift + Hold / Stop / |
|  Hold / Menu |  Shift + Home / Menu / |
|  Size / Angle |  Zoom / Size |
|  Subpage / Title |  Shift + Sound / Title |

| Original | Substituto |
|---|---|
|  Index / Goto |  Info / Angle |
|  Red / Program |  Red / Netflix / Search |
|  Green / Slow |  Green / APP / Repeat |
|  Yellow / Repeat |  Yellow / YouTube / Repeat |
|  Blue / A-B |  Blue / Prime Video / Random |
|  CH + |  CH+ / Page+ |
|  Sys-Menu |  Menu / Home |
|  Vol + |  Vol+ |
|  CH - |  CH- / Page- |
|  Input / Sourc |  AV / Input / RDS |
|  Vol - |  Vol- |
|  DVD |  Shift + 2 |
|  DVD-Setup |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |





| Original | Substituto | Original | Substituto |
|---|---|---|---|
|  Down |  Down |  Nicam / A2 |  Audio / Lang I/II |
|  DVB |  Smart / List |  Mute |  Mute / Dimmer |
|  Sys-Exit |  Exit / Cancel / Clear |  Sleep |  Sleep / Timer |
|  1 |  1 |  TV / Radio |  TV/Radio / |
|  2 |  2 |  FAV |  Fav / Marker / PC |
|  3 |  3 |  Fav + |  Shift + CH+ / |
|  4 |  4 |  Fav - |  Shift + CH- / |
|  5 |  5 |  Pic. Format |  Shift + Picture / Format |
|  6 |  6 |  Subtitle |  Subtitle / EQ |
|  7 |  7 |  Text |  Text / Goto |
|  8 |  8 |  Display |  Display / Media |
|  9 |  9 |  Language |  Shift + Audio / Lang I/II |
|  /-- |  Shift + Guide / EPG / /-- |  EPG |  Guide / EPG / /-- |
|  0 |  0 | | |
|  Recall |  Back / Return | | |
|  Picture |  Picture / Format | | |
|  Sound |  Sound / Title | | |

