



Original	Substituto	Original	Substituto
	Power		Power
	TV	+	Shift + 1
	Tuner/Band	+	Shift + 6
	FM Mode		TV/Radio /
	DVD/CD	+	Shift + 3
	DVD/CD	+	Shift + 2
	I<</Skip Down		I<< / Preset-
	Power VCR	+	Shift + Power
	>>I / Skip Up		>>I / Preset+
	TV / AV		AV / Input / RDS
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter / Set		OK
	Right		Right
	OSD		Smart / List
	Down		Down
	Return		Back / Return
	Angle		Info / Angle
	RDS	+	Shift + AV / Input / RDS
	Timer		Sleep / Timer
	Setup		Setup / OPT /
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Play Mode		Picture / Format
	1		1
	2		2
	3		3





	Original	Substituto
	Display	Display / Media
	4	4
	5	5
	6	6
	A-B Repeat	Yellow / YouTube / Repeat
	7	7
	8	8
	9	9
	Repeat	Green / APP / Repeat
	Cancel	Exit / Cancel / Clear
	0	0
	-/- >10	Guide / EPG / -/-
	Position	CH+ / Page+
	Center Focus	CH- / Page-
	Subwoofer	Shift + Eject / Surround
	D.MIX	Blue / Prime Video / Random
	Dolby PL	Sound / Title

	Original	Substituto
	CH Select	Red / Netflix / Search
	SFC	Zoom / Size
	Test	Text / Goto
	Muting	Mute / Dimmer
	Super Surround	Eject / Surround
	Vol-	Vol-
	Vol+	Vol+

