 





 





 
















 








Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Format		Picture / Format
	RES.		AV / Input / RDS
	TTX		Text / Goto
	S-T		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Original	Substituto	Original	Substituto
	Rec		Rec / Rec Mode
	PVR List		Smart / List
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/-
	Down		Down
	Info		Info / Angle
	CH +		CH+ / Page+
	TV / Rad		TV/Radio /
	Vol +		Vol+
	CH -		CH- / Page-
	Audio		Audio / Lang I/II
	Vol -		Vol-





Original	Substituto	Original	Substituto
[1]	1	[TV 1]	1
[2]	2	[DVD 2]	2
[3]	3	[CD - STB 3]	3
[4]	4	[VIDEO 4]	4
[5]	5	[TAPE 5]	5
[6]	6	[TUNER 6]	6
[7]	7	[AUX - HDD 7]	7
[8]	8	[USB 8]	8
[9]	9	[BLUETOOTH 9]	9
[FAV]	FAV	[PC FAV MARKER]	Fav / Marker / PC
[0]	0	[HDMI - SAT 0]	0
[Recall]	Recall	[RETURN BACK]	Back / Return

