 


 
 

 




 


 
 


 





 










 
 











 



 
 












 
 
 
 




Original	Substituto	Original	Substituto
 Standby	 Power	 Down	 Down
 Mute	 Mute	 Right	 Right
 P/N	 Smart	 Left	 Left
 Open/Close	 Eject	 OK	 Ok
 <<	 <<	 Vol+	 Vol +
 >>	 >>	 Vol-	 Vol -
 Play/Pause	 Play	 1	 1
 Stop	 Stop	 2	 2
 I<<	 I<<	 3	 3
 >>I	 >>I	 4	 4
 Setup	 Options	 5	 5
 Source	 AV	 6	 6
 Info	 Info	 7	 7
 Return/Exit	 Exit	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Slow	 Back





Original	Substituto	Original	Substituto
 GOTO	Goto	 MEDIA	Media
 PROGRAM	Program	 SLEEP	Sleep
 TITLE/TTX	Title/TTX	 TEXT	Text
 AUDIO	Audio	 DUAL	Dual
 SUBTITLE	Subtitle	 SUBT	Subt
 REPEAT	Red/Repeat	 A	Red
 A-B	Green/A-B	 B	Green
 MENU	Yellow/Menu	 C	Yellow
 ANGLE	Blue/Angle	 D	Blue
 EPG	EPG	 GUIDE	Guide
 FAVORITE	Favorite	 PRE-CH	Pre Ch
 TVRADIO	Tv/Radio	 TV/R	TV/R
 ZOOM	Zoom	 SHIFT +  ZOOM	Shift + Eject

