
 
 




Original	Substituto	Original	Substituto
 VHS Power	 Power	 9	 9
 Audio	 Dual	 0	 0
 TV Power	 Shift + Power	 -/-- / ≥10	 Guide
 TV AV	 Shift + AV	 Cancel / Reset	 Exit
 TV CH +	 Shift + Ch +	 CH + / Tracking/V-Lock +	 Ch +
 TV CH -	 Shift + Ch -	 CH - / Tracking/V-Lock -	 Ch -
 TV Volume +	 Vol +	 Input	 Media
 TV Volume -	 Vol -	 Repeat	 Text
 Operation Select VHS	 Smart	 I<< Index/Skip	 I<<
 1	 1	 >>I Index/Skip	 >>I
 2	 2	 << REW	 <<
 3	 3	 >> FF	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause / Slow	 Pause
 6	 6	 Play	 Play
 7	 7	 Menu / Play List	 Menu
 8	 8	 Menu / Play List	 List







Original	Substituto
DVD Power	Power
Audio	Dual
TV Power	Shift + Power
TV AV	Shift + AV
TV CH +	Shift + Ch +
TV CH -	Shift + Ch -
TV Volume +	Vol +
TV Volume -	Vol -
Operation Select DVD	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Substituto
9	9
0	0
-/-- / ≥10	Guide
Cancel / Reset	Exit
Repeat	Text
I<< Index/Skip	I<<
>>I Index/Skip	>>I
<< REW	<<
>> FF	>>
Stop	Stop
Pause / Slow	Pause
Play	Play
Direct Navigator / Top Menu	Shift + Menu
Direct Navigator / Top Menu	D. Menu
Menu / Play List	Menu
Up	Up
Left	Left



