










Original	Substituto	Original	Substituto
 Open/Close	 Eject / Surround	 Prog/EPG	 Guide / EPG / -/--
 Power	 Power	 PBC	 D.Menu / Top
 1	 1	 Goto	 Shift + Text /
 2	 2	 Vol-	 Vol-
 3	 3	 Vol+	 Vol+
 Mute	 Mute / Dimmer	 Pause	 Pause / Step / Freeze
 4	 4	 Play	 Play / Slow
 5	 5	 Stop	 Stop / Hold
 6	 6	 Setup	 Setup / OPT /
 Title/TTX	 Text / Goto	 Up	 Up
 7	 7	 Return	 Back / Return
 8	 8	 Left/Fav-	 Left
 9	 9	 Enter	 OK
 Menu	 Menu / Home	 Right/Fav+	 Right
 10+	 Fav / Marker / PC	 Mode	 Red / Netflix / Search
 0	 0	 Down	 Down
 Display	 Display / Media	 Tv/Radio	 TV/Radio /





	Original	Substituto		Original	Substituto
REV	<</Rev	<< / Tune-			
FWD	>>/Fwd	>> / Tune+			
PREV	I<</Prev	I<< / Preset-			
NEXT	>>I/Next	>>I / Preset+			
DVD	DVD	+  Shift + 2			
DVB	DVB	Blue / Prime Video / Random			
USB	USB	+  Shift + 8			
CARD	Card	Smart / List			
ZOOM	Zoom	Zoom / Size			
LANGUAGE	Language	Audio / Lang I/II			
L/R	L/R	AV / Input / RDS			
SUBTITLE	Subtitle	Subtitle / EQ			
REPEAT	Repeat	Green / APP / Repeat			
A-B	A-B	Yellow / YouTube / Repeat			
ANGLE	Angle	Info / Angle			
SLOW	Slow	+  Shift + Play /			