



Original	Substituto
 On/Standby	 Power
 Display	 Display / Media
 DVD / BD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL/SAT	 Shift + 0
 Game	 Shift + 9
 AUX	 Shift + 7
 TV / TAPE	 Shift + 5
 TV / TAPE	 Shift + 1
 TUNER	 Shift + 6
 PORT	 Shift + 8
 CD	 Shift + 3
 Muting	 Mute / Dimmer
 CH/Disc/Album	 CH+ / Page+
 Vol+	 Vol+
 CH/Disc/Album-	 CH- / Page-
 Vol-	 Vol-

Original	Substituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Movie Tv	 Red / Netflix / Search
 Music	 Green / APP / Repeat



 























 





 

 

 

 



 



 

 

 

 

 

 

 

 



 

 

 



	Original	Substituto	
	Game	 Yellow / YouTube / Repeat	
	Stereo	 Blue / Prime Video / Random	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/--/---10/Dimmer/D.Tun	 Guide / EPG / -/--	
	0/11		0
	CLR/Sleep/12	 Fav / Marker / PC	
	CLR/Sleep/12	 Sleep / Timer	
	CLR/Sleep/12	 Exit / Cancel / Clear	

Original	Substituto





Original	Substituto	Original	Substituto
 Power BD/DVD	 Power	 << BD/DVD	 << / Tune-
 DVD/BD	 Smart / List	 Play BD/DVD	 Play / Slow
 CBL/SAT	 Display / Media	 >> BD/DVD	 >> / Tune+
 Vol+ Receiver	 Vol+	 Pause BD/DVD	 Pause / Step / Freeze
 Vol- Receiver	 Vol-	 Stop BD/DVD	 Stop / Hold
 Top Menu	 D.Menu / Top	 Search BD/DVD	 Red / Netflix / Search
 Up BD/DVD	 Up	 Repeat BD/DVD	 Green / APP / Repeat
 Menu BD/DVD	 Menu / Home	 Random	 Blue / Prime Video / Random
 Left BD/DVD	 Left	 Play Mode	 Yellow / YouTube / Repeat
 Enter BD/DVD	 OK	 1 BD/DVD	 1
 Right BD/DVD	 Right	 2 BD/DVD	 2
 Setup BD/DVD	 Setup / OPT /	 3 BD/DVD	 3
 Down BD/DVD	 Down	 4 BD/DVD	 4
 Return BD/DVD	 Back / Return	 5 BD/DVD	 5
 Audio BD/DVD	 Audio / Lang I/II	 6 BD/DVD	 6
 I<< BD/DVD	 I<< / Preset-	 7 BD/DVD	 7
 >>I BD/DVD	 >>I / Preset+	 8 BD/DVD	 8



 

 














 

 







 


 



 

 

 







 



Original		Substituto		Original		Substituto	
	9 BD/DVD		9		<< CBL/SAT		Shift + << /
	+10/--/-10		Guide / EPG / --		Play CBL/SAT		Shift + Play /
	0/11 BD/DVD		0		>> CBL/SAT		Shift + >> /
	CLR/12 BD/DVD		Fav / Marker / PC		Pause CBL/SAT		Shift + Pause / Step /
	CLR/12 BD/DVD		Exit / Cancel / Clear		Stop CBL/SAT		Shift + Stop /
	Power CBL/SAT		Shift + Power		Movie Tv/Search CBL/SAT		Shift + Red / Netflix /
	CH Disc/Album+ CBL/SAT		Shift + CH+ /		Music/Repeat CBL/SAT		Shift + Green / APP /
	CH Disc/Album- CBL/SAT		Shift + CH- /		Game/Random		Shift + Yellow / YouTube /
	Guide CBL/SAT		Shift + Guide / EPG / --		Stereo/Play Mode CBL/SAT		Shift + Blue / Prime
	Up CBL/SAT		Shift + Up		1 CBL/SAT		Shift + 1
	Menu/Prev CH CBL/SAT		Shift + Menu /		2 CBL/SAT		Shift + 2
	Left CBL/SAT		Shift + Left		3 CBL/SAT		Shift + 3
	Enter CBL/SAT		Shift + OK		4 CBL/SAT		Shift + 4
	Right CBL/SAT		Shift + Right		5 CBL/SAT		Shift + 5
	Setup CBL/SAT		Shift + Setup / OPT / Tools		6 CBL/SAT		Shift + 6
	Down CBL/SAT		Shift + Down		7 CBL/SAT		Shift + 7
	Return CBL/SAT		Shift + Back / Return		8 CBL/SAT		Shift + 8







Original	Substituto	Original	Substituto
 Power CD	 Power	 Play CD	 Play / Slow
 CD	 Smart / List	 >> CD	 >> / Tune+
 CH/Disc+ CD	 CH+ / Page+	 Pause CD	 Pause / Step / Freeze
 Vol+ Receiver	 Vol+	 Stop CD	 Stop / Hold
 CH/Disc- CD	 CH- / Page-	 Search CD	 Red / Netflix / Search
 Vol- Receiver	 Vol-	 Repeat CD	 Green / APP / Repeat
 Up CD	 Up	 Random CD	 Blue / Prime Video / Random
 Left CD	 Left	 Play Mode CD	 Yellow / YouTube / Repeat
 Enter CD	 OK	 1 CD	 1
 Right CD	 Right	 2 CD	 2
 Setup CD	 Setup / OPT /	 3 CD	 3
 Down CD	 Down	 4 CD	 4
 Return CD	 Back / Return	 5 CD	 5
 Audio CD	 Audio / Lang I/II	 6 CD	 6
 I<< CD	 I<< / Preset-	 7 CD	 7
 >>I CD	 >>I / Preset+	 8 CD	 8
 << CD	 << / Tune-	 9 CD	 9







Original	Substituto	Original	Substituto
 Power Receiver Zone 2	 Power	 >> Zone 2	 >> / Tune+
 CH Disc/Album+ Zone 2	 CH+ / Page+	 Pause Zone 2	 Pause / Step / Freeze
 Vol+ Zone 2	 Vol+	 Stop Zone 2	 Stop / Hold
 CH Disc/Album- Zone 2	 CH- / Page-	 Movie Tv Zone	 Red / Netflix / Search
 Vol- Zone 2	 Vol-	 Music Zone 2	 Green / APP / Repeat
 Up Zone 2	 Up	 Game Zone 2	 Yellow / YouTube / Repeat
 Left Zone 2	 Left	 Stereo Zone 2	 Blue / Prime Video / Random
 Enter Zone 2	 OK	 1 Zone 2	 1
 Right Zone 2	 Right	 2 Zone 2	 2
 Setup Zone 2	 Setup / OPT /	 3 Zone 2	 3
 Down Zone 2	 Down	 4 Zone 2	 4
 Return Zone 2	 Back / Return	 5 Zone 2	 5
 Audio Zone 2	 Audio / Lang I/II	 6 Zone 2	 6
 I<< Zone 2	 I<< / Preset-	 7 Zone 2	 7
 >>I Zone 2	 >>I / Preset+	 8 Zone 2	 8
 << Zone 2	 << / Tune-	 9 Zone 2	 9
 Play Zone 2	 Play / Slow	 +10/--/--10/D.Tun/Dimmer Zone 2	 Guide / EPG / -/-







	Original	Substituto
	0/11 Zone 2	0
	CLR/Sleep/12	Fav / Marker / PC

	Original	Substituto

