

 



 


















 
 
 
 

 





 




Original	Substituto
 Power	 Power
 Text / Display	 Text
 Call / Index	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Input	 AV
 Menu / DVD	 Menu
 →  [ / ]  ←	 3D

Original	Substituto
 Aspect	 Format
 Exit	 Exit
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 I/II	 Dual
 Audio	 Shift + Dual



















 
 





 








Original	Substituto	Original	Substituto
	Mute		Mute
	Play / Reveal		Smart
	Stop / Hold		Stop
	Play / Reveal		Play
	<< / Size		<<
	>> / [0] / [≡X]		>>

Original	Substituto	Original	Substituto





Original	Substituto	Original	Substituto
 Power	 Power		
 Menu DVD	 Menu		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Pause	 Pause		
 Play	 Play		
 <<	 <<		
 >>	 >>		
 Open/Close	 Eject		
 Stop	 Stop		
 I<<	 I<<		
 >>I	 >>I		





	Original	Substituto	Original	Substituto
	Power			
	Pause			
	Play			
	<<			
	>>			
	Eject			
	Stop			
	I<<			
	>>I			

